

AeGIS 8000 SERIES QUICK REFERENCE GUIDE

LOCAL PROGRAMMING

- 1) PRESS 0 AND # SIMULTANEOUSLY THEN RELEASE**, the display screen stops scrolling (If the display screen is still scrolling repeat this step again) then enter the valid 4-digit Master Code (default Master Code: 0000). Now, you are in programming mode and see table below to continue.
- 2) IF YOU DO NOT HAVE A VALID MASTER CODE**, open the panel (key must be used) then press and release the **"RED BUTTON"** on the board and the display shows: **x x x x: 4-digit Master Code**, then press #. Now, you are in programming mode and see table below to continue.

SYSTEM'S OPERATION

TO PLACE A CALL FROM THE AeGIS 8000 SERIES:

Press 3 to scroll the tenant name from A to Z. or Press 6 to scroll the tenant name from Z to A, then press #.

TO PLACE A DIRECT CALL:


Press #, wait for a dial tone then press the 2, 3 or 4 digit directory number.

TO GRANT ACCESS TO VISITOR: Press 9 or 8 (default Setting) to release door 1 or door 2. Remote access number can be changed to user preference on function code 20 and 21.

TO USE THE 4-DIGIT ACCESS CODE: Press * then the 4-digit code.

TO EXTEND THE TALK TIME: Tenant must press the # after the time-out warning beep, the talk time will be extended to another cycle.

TO CALL INTO THE AeGIS 8000 SERIES: Dial the AeGIS phone number, you hear "ONE SHORT BEEP" if you are connected then press * to communicate with the visitor and press 9 or 8 (default setting to unlock the door 1 and door 2).

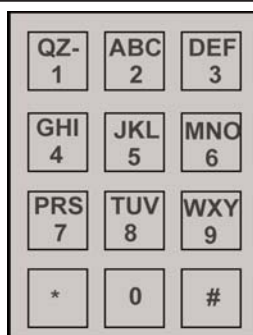

- Press "0" key for space or move cursor to the right.
- Press "8" then "0" for backspace or move cursor to the left.
- Press "*" to clear or reset the lettering sequence. Sometimes the letter key strokes are out of sequence, press "*" to reset.

FUNCTION CODE	DESCRIPTION	FUNCTION CODE	DESCRIPTION
*	Exit programming mode, clear the field and reset keystroke.	17	Set Current Date
#	To accept program.	19	Enable or disable event recording.
00	Change unit master code.	20	Open door number select 1-9
01	Add a tenant (new tenant only).	21	Open door number select 1-9
02	Modify an existing tenant.	40	Master Code Mask. Read instruction.
03	Delete an existing tenant.	46	Display system's information.
04	Clear all tenants.	50	Clear the EEPROM memory to factory default.
05	Manual Unlock Door 1. • Enter 01-98 hours • Enter 99 to unlock hold. • Enter 00 to lock.	70	Modem Protocol. "1"= V22, "0" = Bell212.
06	Manual Unlock Door 2. Same selection as function code 05.	71	Enable or disable modem. Default setting is enabled.
07	Single or Multi System (default setting is single).	72	Change lock-out count (1-9). Default setting is 3.
08	Not applicable	73	Tone or pulse dialing. Default setting is tone.
09	Directory Digit (2, 3 and 4 digits). Default setting is 3-digit.	74	Enable or disable auto answer. Default setting is enabled.
10	Edit welcome screen.	75	Enable/Disable key-press beep.
11	Door 1 open interval (04-99 seconds). Default setting is 12 seconds.	76	Enable/Disable speaker beep.
12	Door 2 open interval (04-99 seconds). Default setting is 12 seconds.	77	Enable/Disable PBX
14	Set Time (Military time)	78	View directory and name
15	Daylight Saving Time	79	Talk Time (10-180 Seconds)
16	Display current Date	91	Not Available.